



E-Motion 2-lea elektrisk justering

Place the end bars 5 cm in from plate edge on each side

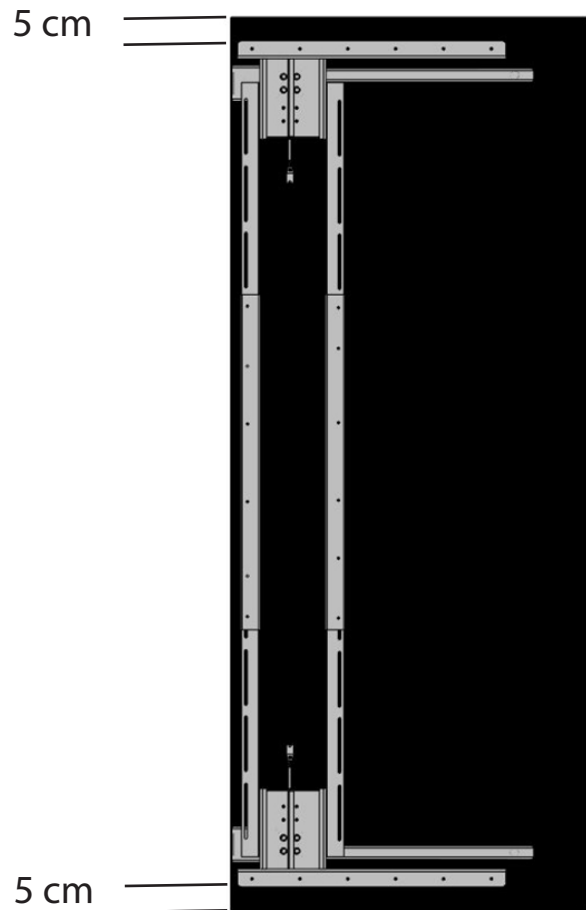

Placement beneath plate

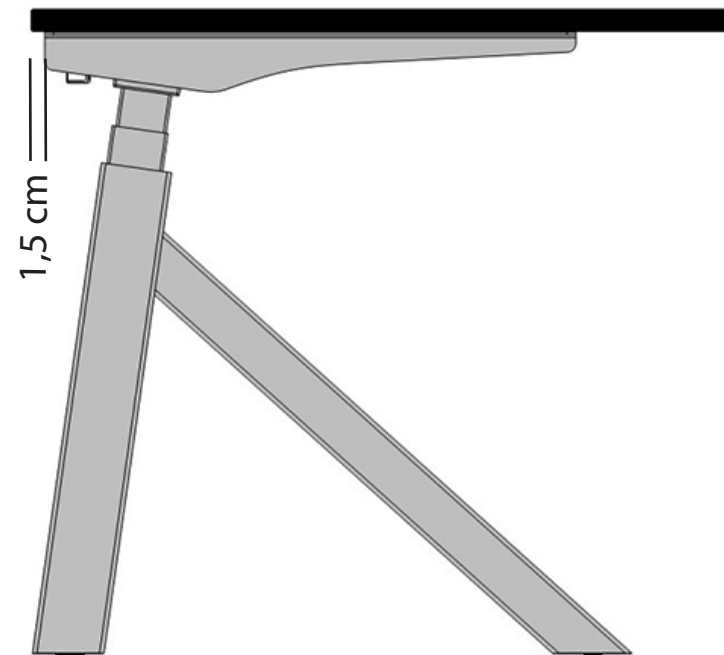

Place the plate 1,5 cm in from the edge (not from the working/sitting side)

Pictures, FDV, dwg:



eller:
<https://scansorlie.no/produkt/e-motion/>

SCAN SØRLIE